

TECMO, INC.

Victoria Business Park
18005 S. Adria Maru Lane, Carson, CA 90746
Phone: (213) 329-5880, Fax: (213) 329-6134

January 25, 1989

To All Distributors,

Ugh! A typo error in the edge connector diagram for Ninja Gaiden. That's right! I didn't catch it until after a few hundred kits went out. Please make note of the corrections shown below and let operators know of the possibility.

I am very sorry and will be flogged at high noon.

Jim


Edge Connector:

<u>Solder Side</u>	<u>No.</u>	<u>No.</u>	<u>Parts Side</u>
Player 2	U	17	Player 1
Grab	Z	22	Grab
Attack	a	23	Attack
Jump	b	24	Jump

Edge Connector


SOLDER SIZE	NO.	NO.	PARTS SIDE
BLK GND	A	1	GND
BLK GND	B	2	GND
RED +5V	C	3	+5V
RED +5V	D	4	+5V
BROWN	E	5	
BLUE +12V	F	6	+12V
KEY	H	7	KEY
NC COIN COUNTER 2	J	8	COIN COUNTER 1 NC
NC COIN OUT 2	K	9	COIN OUT 1 NC
BLK SPEAKER (-)	L	10	SPEAKER (+) WHITE BLK
	M	11	
VIDEO GREEN	N	12	VIDEO RED
WHITE VIDEO SYNC	P	13	VIDEO BLUE
NC SERVICE SW	R	14	VIDEO GND NC
NC RESET SW	S	15	
NC COIN 2	T	16	COIN SW1 NC
RED P2	U	17	P1 WHITE YELLOW PINK
BROWN UP	V	18	UP BLK ORANGE BLUE
ORANGE DOWN	W	19	DOWN GREEN RED
WHITE LEFT	X	20	LEFT GREEN BLK
RED RIGHT	Y	21	RIGHT RED ORANGE YELLOW
BROWN ATTACK GRAB	Z	22	GRAB ATTACK RED WHITE
YELLOW JUMP ATTACK	a	23	ATTACK JUMP WHITE RED
BROWN GRAB JUMP	b	24	JUMP GRAB YELLOW BLK
	c	25	
	d	26	
VIDEO GND	e	27	GND
GND	f	28	GND

JOYSTICK LEVER — 8 directions

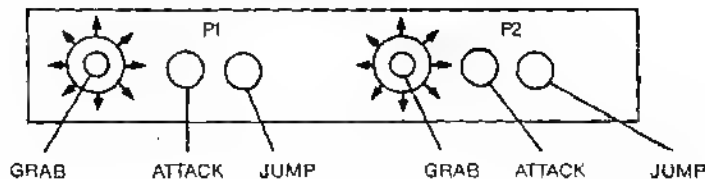

Dip Switch Settings

- *Position of Dip SW*

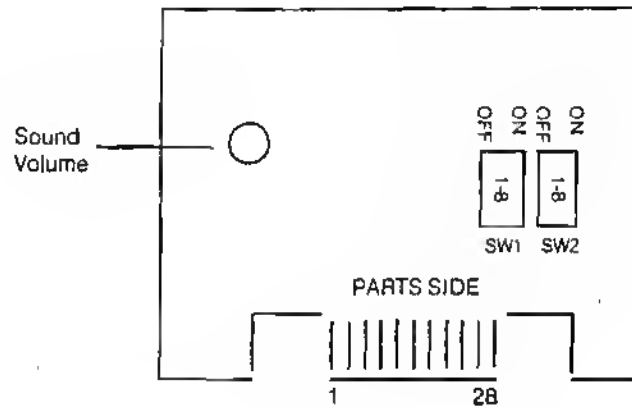

- *Dip Switch A*

DIP SWITCH A		1	2	3	4	5	6	7	8
COIN 1	1 COIN 1 CREDIT	OFF	OFF	OFF					
	1 COIN 2 CREDIT	ON	OFF	OFF					
	1 COIN 3 CREDIT	OFF	ON	OFF					
	1 COIN 4 CREDIT	OFF	OFF	ON					
	2 COIN 1 CREDIT	ON	ON	OFF					
	3 COIN 1 CREDIT	ON	OFF	ON					
	4 COIN 1 CREDIT	OFF	ON	ON					
	5 COIN 1 CREDIT	ON	ON	ON					
COIN 2	1 COIN 1 CREDIT				OFF	OFF	OFF		
	1 COIN 2 CREDIT				ON	OFF	OFF		
	1 COIN 3 CREDIT				OFF	ON	OFF		
	1 COIN 4 CREDIT				OFF	OFF	ON		
	2 COIN 1 CREDIT				ON	ON	OFF		
	3 COIN 1 CREDIT				ON	OFF	ON		
	4 COIN 1 CREDIT				OFF	ON	ON		
	5 COIN 1 CREDIT				ON	ON	ON		
FLIP THE SCREEN	NORMAL							OFF	
	FLIP							ON	
DEMONSTRATION SOUND	SOUND								OFF
	NON SOUND								ON

- **Dip Switch B**

DIP SWITCH B		1	2	3	4	5	6	7	8
THE NUMBER OF STOCK	1	OFF	OFF						
	2	ON	OFF						
	3	OFF	ON						
	0	ON	ON						
PHYSICAL STRENGTH	3			OFF	OFF				
	4			ON	OFF				
	5			OFF	ON				
	2			ON	ON				
DIFFICULTY	NORMAL					OFF	OFF		
	TBL 1					ON	OFF		
	TBL 2					OFF	ON		
	TBL 3					ON	ON		